


## Sprinkler Adjustment:

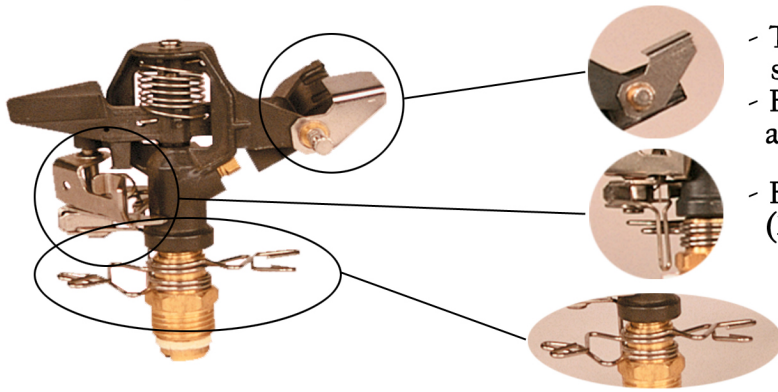


- Twist screw in/out to diffuse or break up water stream to obtain desired stream pattern.
- Flap moves up and down to deflect water stream and adjust distance.
- Flip up trip mechanism wire to achieve a full circle (360) Sprinkler pattern.
- To adjust the watering pattern (1/2 cir, 3/4 cir, 1/4 cir) with the trip mechanism in the down position, move wire ears to desired positions for the trip mechanism to move between.

Warning: Do not over tighten sprinkler in threads. Tighten until threads are snug plus a little. May strip threads if over tightened in plastic. Some small leaking is normal for an impact sprinkler.


## Pressure/Distance:

## Hose Position:

Water Pressure (PSI)	Spray Distance (Feet / Radius)	Gallons/Minute
25	34	3.54
30	35	3.94
35	38	4.35
40	41	4.62
45	43	4.90
50	45	5.17
55	46	5.44

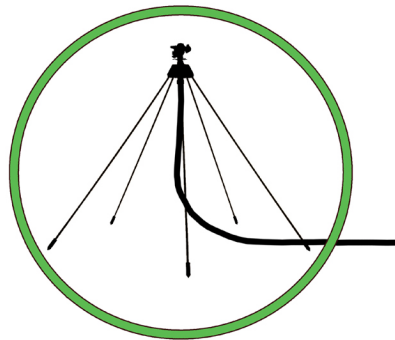


Right

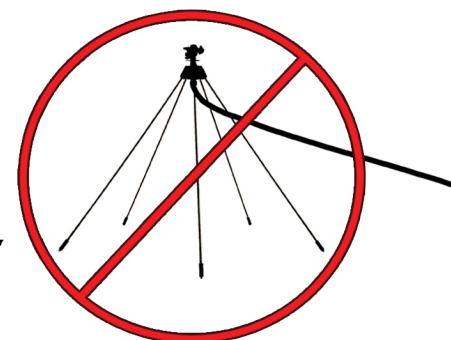

Wrong

## Stand Operation:

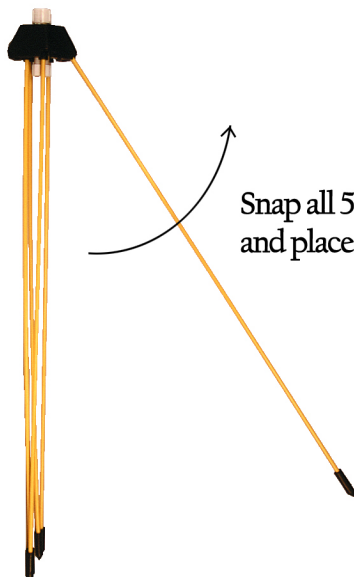

Snap all 5 legs into position and place firmly on the ground

